

MORE FROM WOOD.



## Worktops Installation Kit – 16 mm

### Kit Contents

- 1 x EGGERSeal 20g + applicator/scrapper
- 3 x Jointing Biscuits
- 3 x Toggle Bolts
- 1 x 3 mm Allen Key



## EGGERSeal

Colour matched to the worktop, splashback and upstand to give a seamless and waterproof finish.


- 10–15 minutes open time (fully cured in 15hrs)
- 12 months shelf life (unopened)
- Store in a dry location up to 25°C

### Cleaning

Use the EGGERSeal applicator/scrapper then a soft dry lint free cloth. Use solvent cleaner only for stubborn, engrained or cured residue.

**DO NOT** use IPA Alcohol or IMS Spirits eg. Wet Wipes.

### EGGER Worktops 10 Year Guarantee

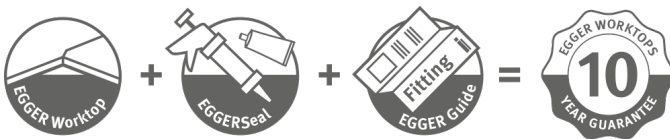

EGGER Worktops have a 10 year guarantee when fitted using EGGERSeal adhesive and in conjunction with the fitting guide (provided in the installation kit). For more information visit

[www.egger.com/worktops-accessories](http://www.egger.com/worktops-accessories)

## Fitting Guide

### Directions for use (16 mm Square Edge Worktops):

Machine a butt and scribe joint using the 16 mm pin position on the EGGER jig, available from all EGGER worktop stockists. Watch the fitting video at [www.egger.com/worktops-accessories](http://www.egger.com/worktops-accessories), which when followed correctly will result in a discreet joint with a 10 mm inset.

The worktops should be dry fitted first to ensure the joint is acceptable. Once confirmed the final jointing process can begin.

Ensure the area to be sealed is dry and free from dust and grease. Add a bead of EGGERSeal to the edge of the jointing biscuits and position in place on one side of the worktop joint.



### 600 mm Deep Worktops

Starting from the rear bolt slot and using the applicator to guide, apply a constant bead of EGGERSeal along the underside, up the back edge, along the top edge, down the front edge and along the underside to the rear bolt slot. Ensure all of the edges are sealed and that there is no gaps in the EGGERSeal.

### 920 mm Deep Worktops

Starting from the rear bolt slot and using the applicator to guide, apply a constant bead of EGGERSeal along the underside, up the back edge, along the top edge and round to the front bolt slot only. Ensure all of the edges are sealed and that there is no gaps in the EGGERSeal.

### Fitting Sinks and Hobs:

We recommend the use of top-mounted sinks only. Traditionally these are fitted with sink clips suitable for worktop thicknesses of 25 mm–38 mm. For our 16 mm worktops, we now offer EGGER wooden batons that create the depth required to attach the sink clips. These are available as a pack from your EGGER worktop stockist.

When a worktop requires a cut-out for either a sink or hob, we strongly recommend using EGGER metal traverses to give the worktop strength and stability. EGGER metal traverses are offered in a range of lengths and supplied in a pack of two from your EGGER worktop stockist.

Bring the joint together before tightening the Toggle Bolts using the 3 mm Hex Key supplied. Ensure the worktop is level along the full length of the joint.

Tighten the Toggle Bolts fully so that the excess EGGERSeal squeezes out the top of the joint. Remove the excess using the angled scraper side of the applicator.

Cleaning: Using a lint free cloth (not supplied), remove any further excess by wiping across the joint at 90° whilst applying moderate pressure. For stubborn residue use Acetone (not supplied) only.

